
#### Canopy Wiring Guide

SMM SteelTop® Canopy


Note: This is the wiring guide supplied by the manufacturer. All wiring should be completed by a trained auto electrician. Please refer to Ford documentation to locate the wires in the vehicle as required.






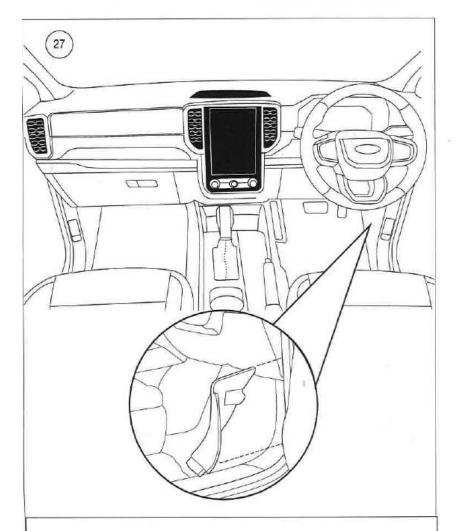


Take off the Wiring Cover at the driver side in order to check the wiring position.

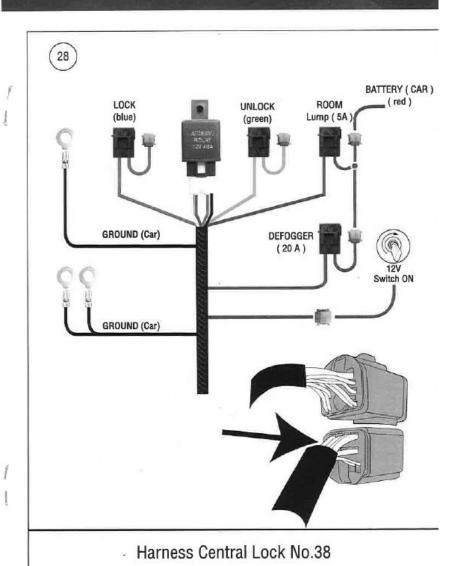




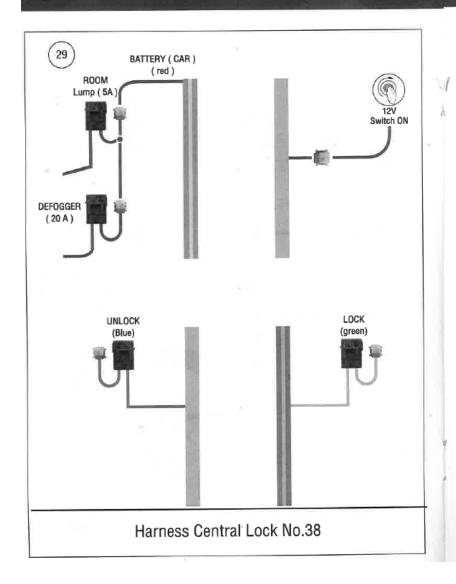

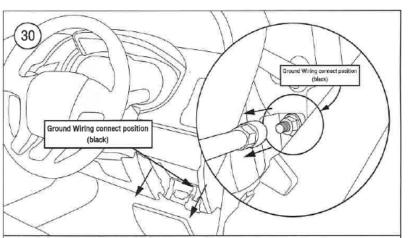


Take off the Cover at the Driver side in order to connect the Black Wiring of the Harness Central Lock No.38 with the Vehicle Structure. Take off the Bolt by using wrench No.10

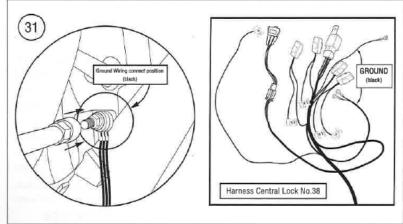


Connect the Black Wiring (Ground) of the Harness Central Lock No.38 with the Vehicle Structure and using wrench tighten.




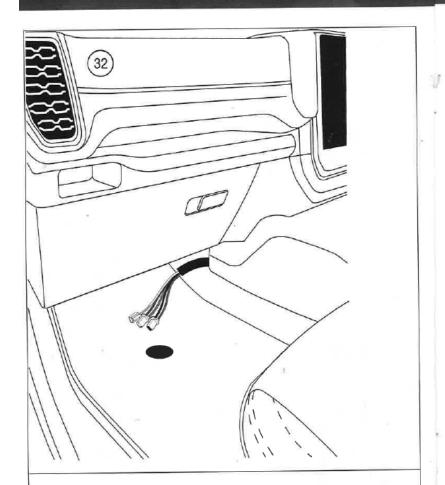

Running canopy wiring via vehicle wiring hole/pipe along under the chassis.

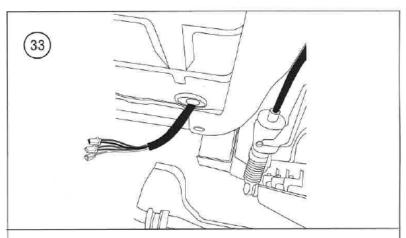


Run the wiring througth the hole of the vehicle floor and seal to protect water leaking problem.

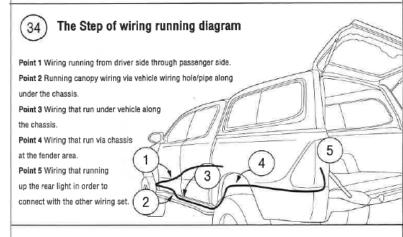



The Step of wiring running diagram for the Harness Central Lock No.38






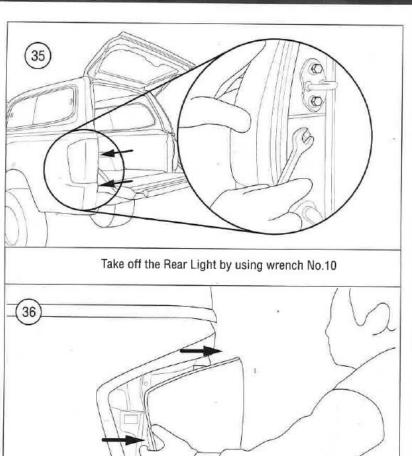


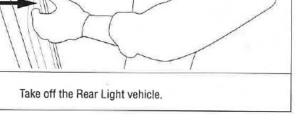

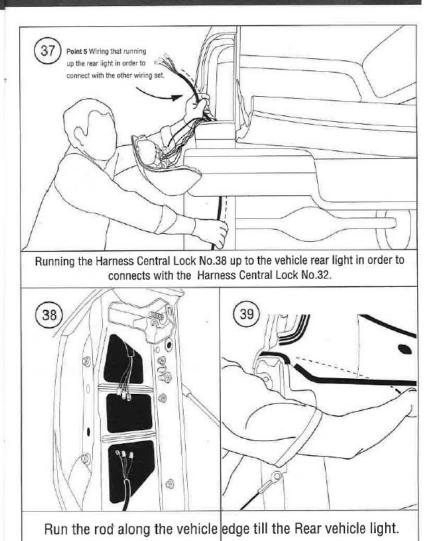




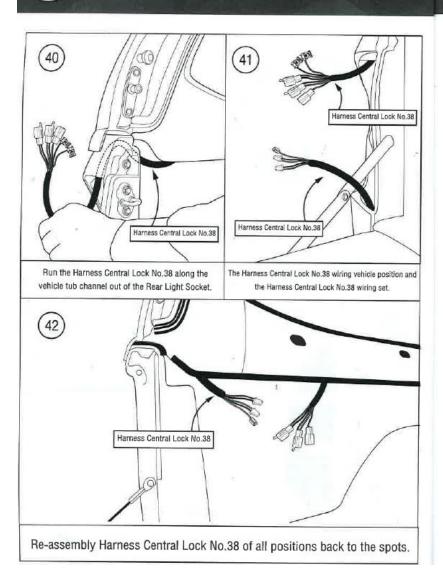

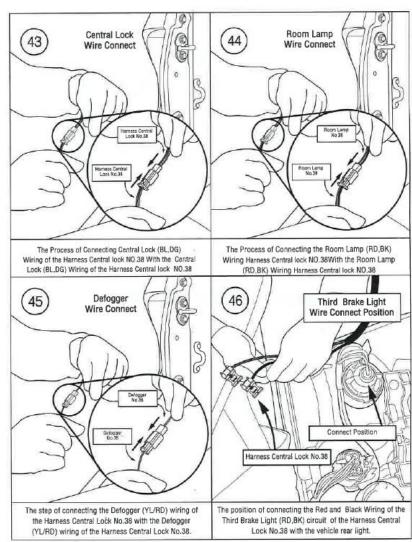



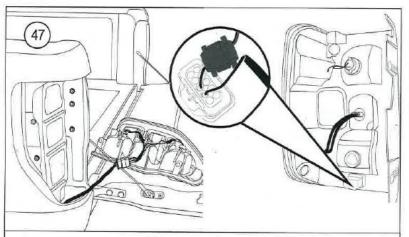

Connect the Red wiring, third Brake Light ( RD ) of the Harness Central Lock No.38 with the Black Brake Light Wiring on the Left Side of the Rear vehicle light.



